

<b>VESTEL</b> WHITE GOODS	<b>FREEZER</b>	<b>CUSTOMER          SUPPORT</b>
	<b>ASSEMBLE &amp; DISASSEMBLE</b>	

**A- Changing The Door Swing Direction to Right Hand**

1- Remove the kick plate by pulling forward. (Fig-1)



Figure-1

2- Unscrew the bottom hinge fixing screws and remove it (Fig-2)



Figure-2

3- Dismantle the door from the top hinge by pulling the door downwards.

4- Unscrew the pin of the right top hinge. (Fig-3)



Figure-3

5- Then by using a knife cut the left side of the head panel. (Fig-4)



Figure-4

6- Screw the pin of the left top hinge. (Fig-5)



Figure-5

<b>VESTEL</b> WHITE GOODS	<b>FREEZER</b>	<b>CUSTOMER          SUPPORT</b>
	<b>ASSEMBLE &amp; DISASSEMBLE</b>	

7- Replace the door top bushing (Fig-6) and top bushing cap. (Fig-7)



Figure-6



Figure-7

8- Remove the door bottom bushing and bottom stopper and then insert them the left side. (Fig-8)



Figure-8

9- Remove the door bottom bushing and insert it into left hole. (Fig-9)



Figure-9

10- Unscrew the pin of hinge from Hole 1, rotate the bottom hinge 90° and screw the pin to Hole 2. (Fig-10)

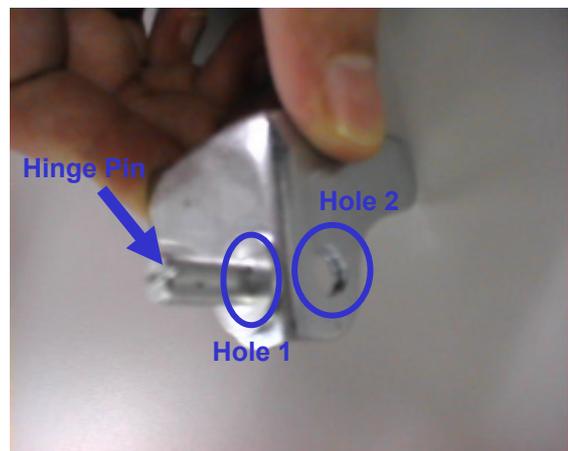


Figure-10

<b>VESTEL</b> WHITE GOODS	<b>FREEZER</b>	<b>CUSTOMER SUPPORT</b>
	<b>ASSEMBLE &amp; DISASSEMBLE</b>	

**11-** Assemble the door together with bottom hinge. Then screw the hinge to bottom left side of refrigerator. (Fig-11)



Figure-11

**12-** Finally, by using a knife cut left side of the kick plate and assemble it. (Fig-12)

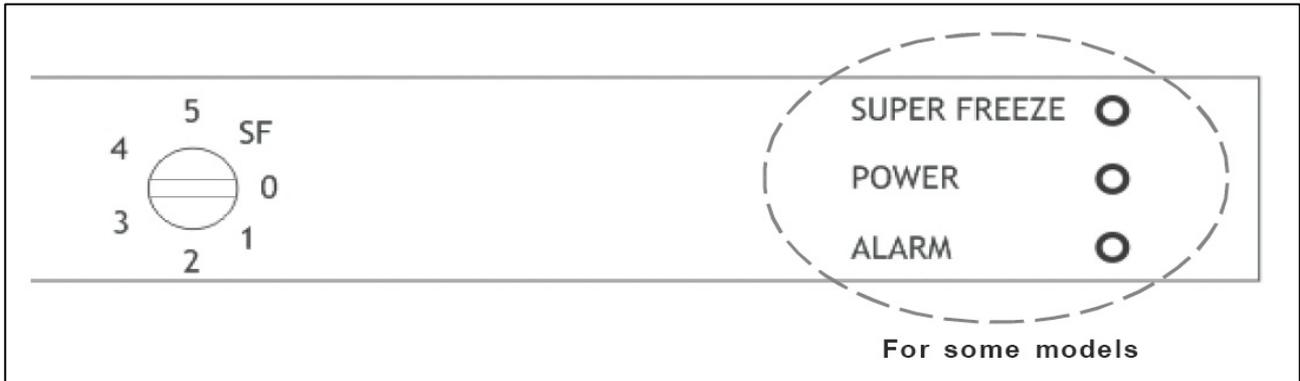


Figure-12

<b>VESTEL</b> WHITE GOODS	<b>FREEZER</b>	<b>CUSTOMER SUPPORT</b>
	<b>ASSEMBLE &amp; DISASSEMBLE</b>	

**Thermostat Setting :**

### FREEZER THERMOSTAT



**Freezer Control :**

Freezer thermostat automatically regulates the inside temperature of the compartments. By rotating the knob from position “1” to “5”, colder temperatures can be obtained.


**Freezer Thermostat Setting :**

- 0** : This position shows thermostat is closed and no cooling is available.
- 1 – 2** : For short-term storage of food in the freezer compartment, you can set the knob between minimum and medium position.
- 3 – 4 – 5** : For long-term storage of food in the freezer compartment, you can set knob medium position.
- SF** : “SUPER FREEZING” for freezing the fresh food. The appliance will work longer. So after you get the cold condition you must position it previous position.

**Note that;** the ambient temperature, temperature of the freshly stored food and how often the door is opened, affects the temperature in the freezer compartment. If required, change the temperature setting.

<b>VESTEL</b> WHITE GOODS	<b>FREEZER</b>	<b>CUSTOMER SUPPORT</b>
	<b>ASSEMBLE &amp; DISASSEMBLE</b>	

**DISPLAY PANEL (For some models)**

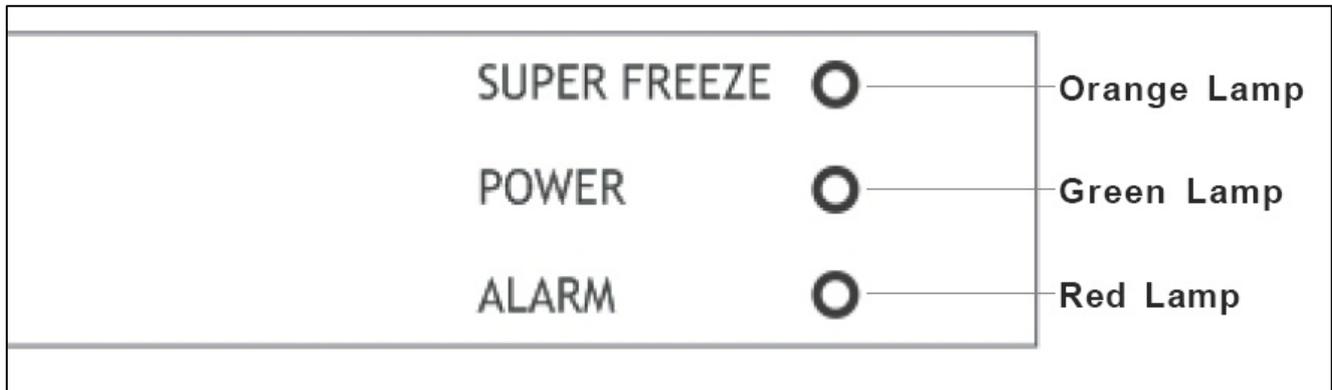

**ORANGE LAMP** : When the “Super Freezing” operation is on (thermostat dial is in SF position), the orange lamp will turn on.

**GREEN LAMP** : When the appliance is connected to the power supply, the green lamp on the display panel will turn on automatically.

**RED LAMP** : When the freezer compartment is not cold enough, the red lamp will turn on. Set the thermostat dial to SF (Super Freeze) position until the red lamp is off. After you get the cold condition you must position to previous position. Check the frozen foods. And if the foods gets thaw, remember to consume them in a short period of time.

<b>VESTEL</b> WHITE GOODS	<b>FREEZER</b>	<b>CUSTOMER SUPPORT</b>
	<b>REFRIGERANT CYCLE DIAGRAM</b>	

